

EX-1 Software Menu Tree

Communications Mode

Alarms.....	Main Menu ▶	Inputs.....	Outputs	
	Data Base Ops			▶ = submenu
	Communications ▶	Locations	Log	
	Information ▶	Access Codes	Parameter /Access Download	
	Setup	Check One Access code	Time Zone Status	
	DOS	Phone Numbers	Device Status	
	Toggle Printers	Enroll New Cards	Remote Information	
	Operator Comments	Print System Status	Network Download Status	
	Guard Tour		Anti-Passback Forgive	
			Current Connections	

Setup

Configure ▶	File ▶	Site Log.....	Print Users Manual
Parameters	Re-Index		
Communication Ports	Create All Data Files (blank)		
Daylight Savings Dates	Create All Data Files (demo)		
System Date/Time	Restore Data Files from Backup (complete)		
PC Hardware Configuration	UnCrunch Backup Files (partial)		

Database Main Menu

Database ▶	History ▶	
Access Codes ▶	View History	
Location	Archive History ▶	Archive Log Files to Floppy
Device	Time and Attendance	Restore Log Files from Floppy
Time Zone		List Files to Screen
Door Group		Delete Log / Archive Files
Access Level		Format 1 Floppy Disk
Output (relay)		
Output Linking▶		
Input		
Facility Code		
Company		
Holiday		
Miscellaneous ▶		
Operator Passwords		
Password Level Definition ▶	Set Where Passwords are Required	
Telephone Directory	Password Level File	
Action Message		
Operator Comment		
User Defined Field Setup		
Guard Tours ▶	Guard Tour Schedules	
	Guard Tour Access Codes	

Reports ▶

Codes ▶	Code List		
	New Code Generator		
System Data ▶	Location List	Door Group List	Company List
	Device List	Output List	Action Message List
	Time Zone List	Linking Level List	Guard Tour Schedules List
	Access Level List	Output Group List	Guard Tour Codes List
	Facility Code List		

Graphics ▶

Graphic List
Color Settings

Excalibur Function Keys & Screen Options

RED OPTIONS BAR The Red Options Bar at the bottom of every screen lists the valid commands. Enter is field accept / Ctrl Enter is save and proceed.

F1 / Context Sensitive Help Press F1 twice for the Help Index. Press G from Help Index, for Glossary of Terms and Glossary of System Message Definitions.

F2 / Input Control Screen Displays the status of all Inputs and provides full control over each one. F2 = Arm, F3 = Bypass, F4 = Follow Time Zone, F5 = All, F6 = Time Zone Data, F10 = Graphics

F3 / Device Communication Status Displays the polling status of each panel. White = Polling, Red = Not Polling. The **Firmware Version** of each panel is displayed to the right of the device number. F2 = Device Info - RAM size and hardware revision.

F4 / Panel Download Status Screen Displays the Master panel downloading to all Slave panels. This is subsequent to the PC downloading to the Master Panel. *0 = Panel Download Complete

F5 / Phone List Emergency phone number list.

F6 / Search a Code Search "All Codes In or Out", just "In" or just "Out" or "Last Used" at a particular door. Searches can be performed by Name or Code.

F7 / Operator Comment Comments can be made anytime and will be permanently recorded into history. Comments can be a Shift Change or Incident Report. Comment length is unlimited.

F8 / Alarm Screen. The Alarm Screen is where Alarms can be acknowledged and resolved and Graphic Maps can be viewed. F5 = Phone list, F10 = Map

F9 / Output Screen. The Output Control Screen provides control and shows the status of each relay or door output. F2 = Open, F3 = Secure, F4 = Follow Time Zone, F5 = All, F6 = Time Zone Data, F7 = Grant Access, F10 = Map

F10 / Remote Status. Reports the memory configuration and Event Buffer Size. **W1823 6/96**