




RS-232 to RS-422 Converter

Interface Installation Instructions

When wired according to the diagram below, this converter allows communication using RS-422 between any host PC and any Micro/5 (Micro/5-E, Micro/5-P, Micro/5-PX), Micro/2, or Micro/4. The output from a 232 line on a host PC is converted and transmitted through a 422 line connected to the top of the power COM board on the micro.

The following diagram describes the wiring of the converter from the PC to the micro:

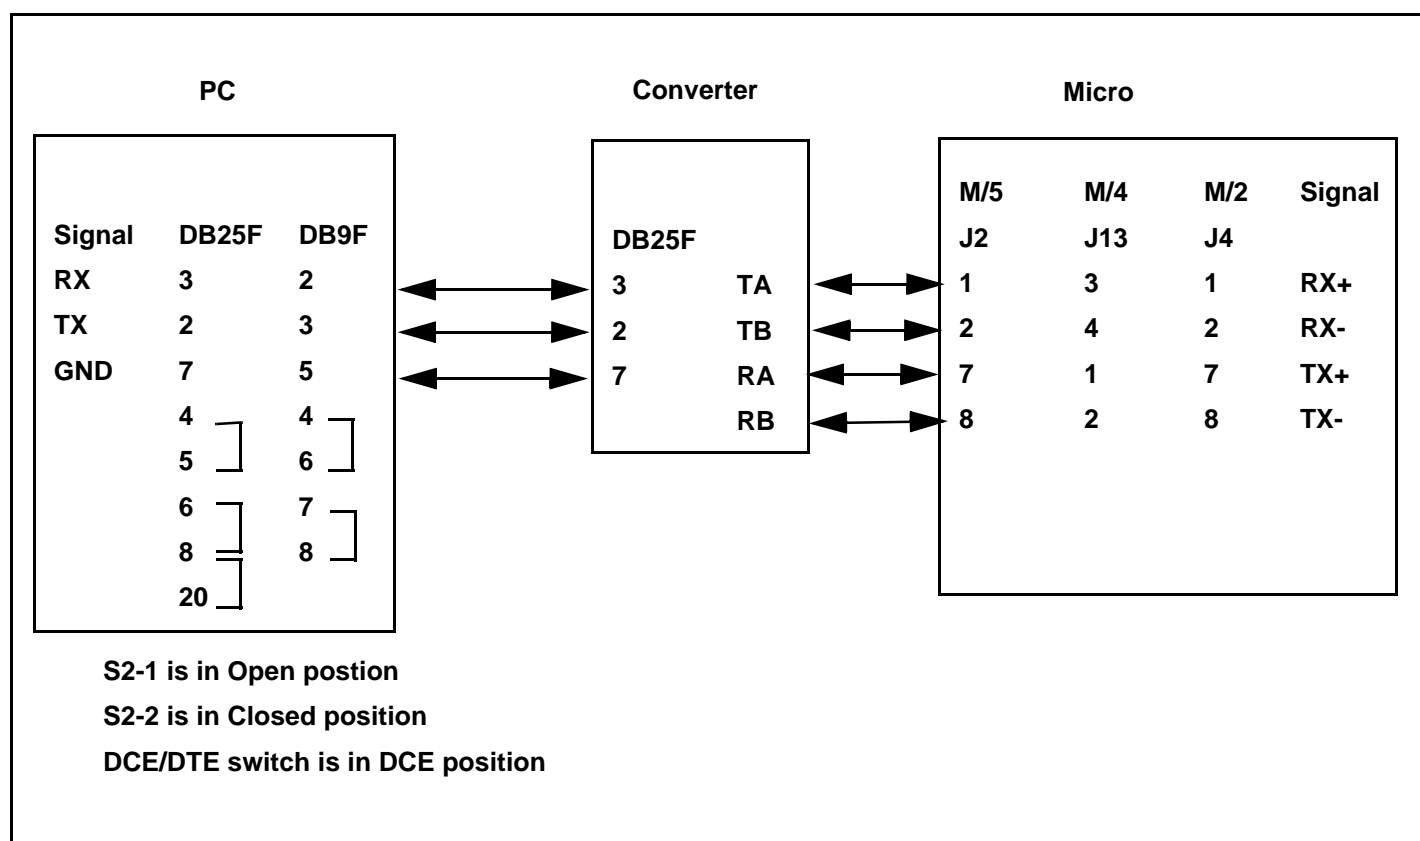

NOTES